

Prisma DI

Change Transducer tip for



Change of Transducer tip

1. Remove adjusting sleeve **1** and locking ring **2**
2. Unscrew the brass nut **3**
3. Pull out the spring **4**
4. Pull out the complete tip unit
5. Remove the teflon cover **5** if mounted
6. Unscrew the tip **6** from the core **7** and mount the new transducer tip
7. Remount in opposite order